



Reversible Witch & Scarecrow @FlowersbyNini

PROJECT PLAN

Skill Level: Beginner



Materials

Item	Qty
Scrap wood/Pallet wood	1 (large)
Hole filler/Patch filler	
Wooden Dowel	1
Acrylic paint	
Large glue gun glue sticks	1
Hay	
Small paintbrushes	2

Tools Used









Drill/Driver

Orbital Sander

Multi-Tool

Glue Gun



Lumber Cut List

Board*	Description	Cut to	Qty
Pallet Wood	Face	3'x1'	1
Pallet Wood	Witch Nose	5"x1"	1
Pallet Wood	Witch Nose	3"x1"	1



Assembly Instructions

Step 1

Gather materials, your HART tools, and charged batteries! Start by using the Multi-Tool to cut out a long oval shape. This will be the face. It should be longer/tipped at the top and bottom.

Step 2

Cut out a witch nose shape and a scarecrow nose shape. We made the witch nose a bit bumpy, and the scarecrow nose rounded (similar to an upside-down candy corn shape), for a whimsical look. However, these can be shaped in any way you'd like! Cut out wobbly-looking rectangles for the hat brims. You'll need 2 – one for each side of the face.

Step 3

Use the sanders to smooth out rough spots and the edges of the wood.

Step 4

Using the drill, screw the pieces in place. For the witch nose, add a dowel instead of a screw. This way, the nose can be bent down when you'd like to switch the face around for the scarecrow side to show.

Step 5

Use a patching material to fill in the holes where the screws are.

Step 6

Paint both sides however you'd like.

Step 7

Add small details with paint (eyes, mouth, eyebrows, etc.)

Step 8

Add hay for the hair, and any other material you'd like to add depth or detail.