


HART™

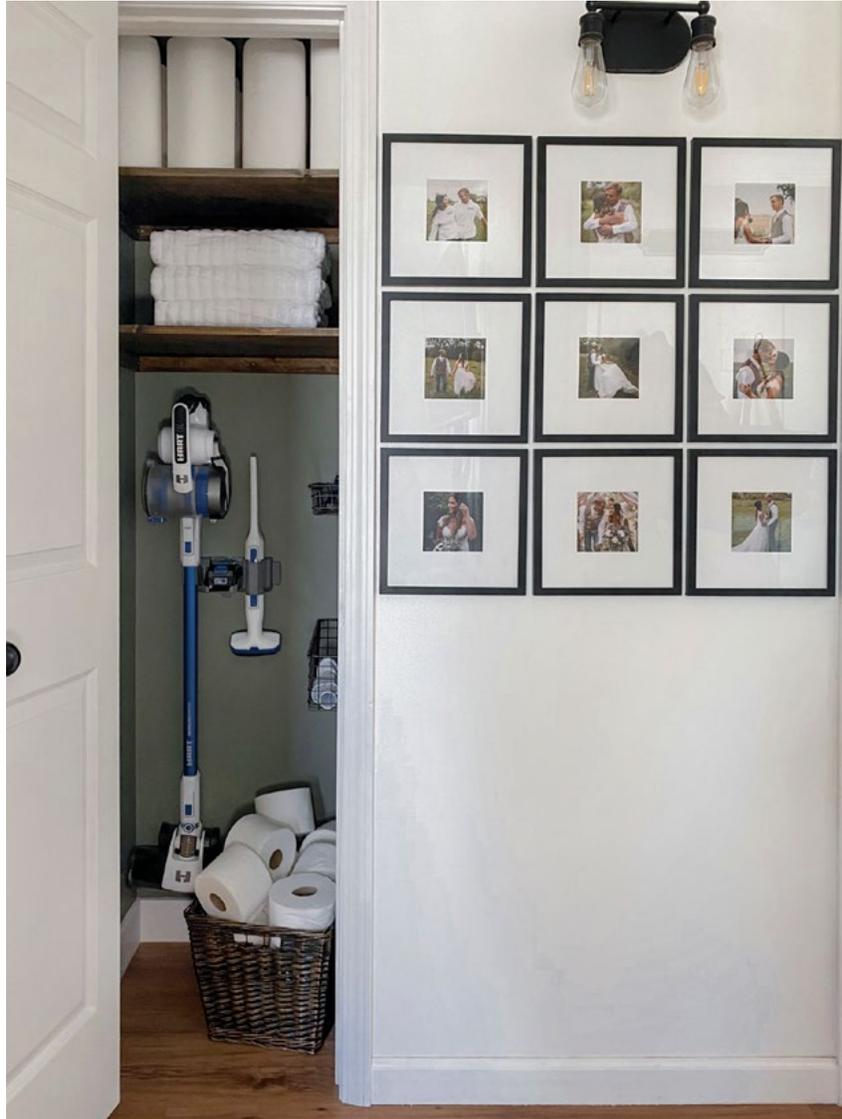

Hall Closet Makeover
@Stripped.and.Styled

PROJECT PLAN

Skill Level: Beginner

Materials

Item	Qty
Furring Strip*	1*
2-1/2" T-25 Screws	
Wood Board*	1*
Stain	
Paint	
Finishing Nails	

*Dimensions and quantity depend on individual closet size

Tools Used



Miter Saw



Circular Saw



Drill/Driver



Impact Driver



Torpedo Level



Tape Measure



Pencil



Pry Bar



Safety Glasses

ALSO NEEDED: Straight Edge, Drill Bits, Stud Finder

Battery Tip: A 4.0 Ah battery is recommended to be paired with high amp draw tools for maximum efficiency.

Assembly Instructions

Step 1

In my linen closet, I first removed previously existing old metal shelving. I filled in any holes using a putty knife and spackle, then sanded when dry.

Step 2

The closet needed a fresh coat of paint, so I decided to paint it green for a pop of color.

Step 3

Measure the back wall of the closet. Mark that measurement on furring strips twice if you are making two shelves, and cut using a miter saw.



Step 4

If you plan on staining or painting these shelves, apply stain or paint each wood piece prior to fastening to closet walls!

Step 5

Use a stud finder to locate studs and mark on furring strips.

Step 6

Using a 1/8" drill bit, drill pilot holes where you marked for studs.

Step 7

Position the furring strip on back wall (one per shelf) where shelf will go using a torpedo level. Once you have ensured the piece is level, use an impact drive to screw it into place.

Step 8

On the side walls, measure the distance remaining from attached back furring strip to where the front of your shelf will be (or at least 3/4 of the shelf).

Step 9

Mark that measurement on furring strips (2 per shelf) and cut using miter saw.

Step 10

Use a stud finder to locate studs on side walls and mark on furring strips. Then, using a 1/8" drill bit, drill pilot holes where you marked for studs.

Step 11

Position the furring strip on side walls in line with the back furring strips using a torpedo level. Once you have ensured the piece is level, use an impact drive to screw it into place.

Step 12

Measure the width of the closet for the shelves and mark on the edge glued pine board. I used a straight edge to draw a line across pine board to follow when cutting. Cut pine board using circular saw. You can use finish nails if you choose to fasten shelves to furring strips.

Organize stuff into your new closet and enjoy!

